

Tools

• Wonder Pins (Art No.3210)









• Graph Ruler (Art No.7703)



• 18mm Bias tape maker (Art No.464/18)



 Water Erasable Marker (Art No. Fine:515 Thick:516)



• Eraser Pen (Art No.518)



Mini ironMini Iron II™

(Art No.8003EU/8004GB/8005)

"The Adapter"

• Patchwork Board "MULTI" •mm Gauge (Art No.57-872)



- Your normal sewing needs
- Hole punch

Materials

- 30cm pretty fabric for the outer
- 30cm fabric for the lining
- 30cm #279 80/20 cotton mix wadding (interfacing)
- Small scrap of leather about 3cm wide x 15cm long
- Small rivet



Designed by Debbie von Grabler-Crozier

Cutting

From the outer fabric:

- Cut two rectangles 25cm wide x 35cm long

From the lining fabric:

- Use the template to cut two mirror image oven glove shapes.
- Cut 40cm bias binding 3.5cm wide

From the interfacing:

- Cut two rectangles 28cm x 38cm

From the leather:

- Trim the leather scrap to 2cm wide x 15cm long

Here's How

NB: seam allowances are all 0.5cm unless otherwise stated. Please read all instructions through and assemble the equipment before beginning.



Preparation




Make the bias binding: take your strip of fabric and use the bias tape maker to get the folds perfect.



Place the interfacing under the fabric and pin with the Wonder Pins.




Pull the bias tape maker as you press the bias binding with the mini iron.

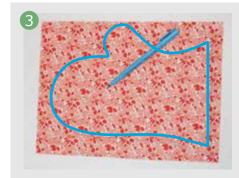

Take the oven glove template and the water soluble marker and draw two mirror image glove shapes onto the right side of the fabric.



Making

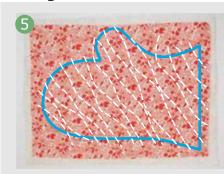

Quilt the glove shapes with your favorite quilting pattern.

tip: I love a random diagonal wave pattern. It is really easy to do and it can be done on almost any sewing machine.



Repeat this for the lining.



Cut the glove shapes out.



Notch the curves on the glove.

tip: This will mean that the edge sits perfectly when it is turned out the right way. You do not have to do this for the lining.



With the right sides together, sew the gloves right around leaving the top edge open.



Turn the glove out the right way and stuff the lining down into the glove. tip: The lining is inside out and the outer is the right way out. This way, the two wrong sides will be together inside the glove – this also means that the glove is fully reversible.





Sew around the top edge.



Finish by attaching the leather hanger with the rivet.



Bind the top edge.



Designer's Favourite




I love the new Wonder Pins! They fill a need in my sewing toolbox and I can imagine using them a lot in the future. They are easy to put through several layers of fabric and they stay there too.



Make a hole with the leather hole punch in the leather strip.



Template (Scale 1/2)

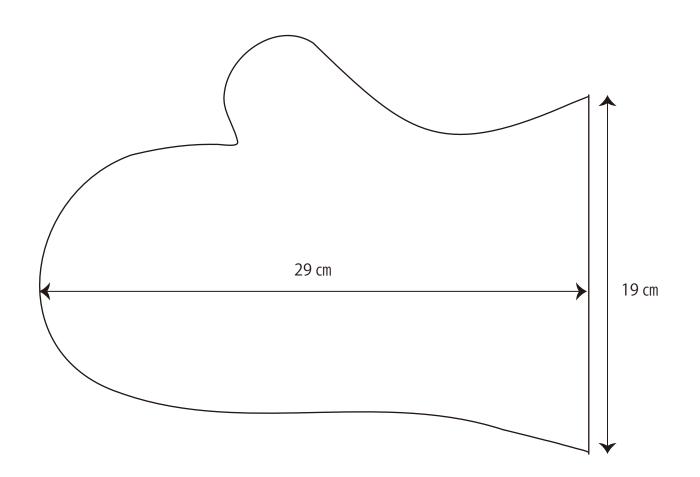

Seam allowance of 0.5cm included.

CLOVER MFG. CO., LTD.